

Michael's®

Made by you™

# Trinity Knot Pendant



*John Bead*  
ESTABLISHED 1954

## What You'll Need

Size 11/0 Toho Seed Beads  
Galvanized Gold, SKU 10474777

6mm Czech Crystal Round, Emerald, SKU 10719474

6mm, 18kt Gold-Plated Bail, SKU 10697680

Wildfire Beading Thread, SKU 10104818

#11 Beading Needle, SKU 10720246

Scissors, SKU 10591717

You will also need a chain and clasp of your choice.

## Intermediate Bead Weaving 1-Hour

John Bead has a Facebook Group!

Share your creations with us!

Tag #MakeItWithMichaels and #JohnBead

### Introduction

Here is a fun way to create a seed beaded, trinity knot setting for Czech crystals! In class we will demo all steps to create the pendant, as well as show a few variations.



Abbreviations:

S11 - Galvanized Gold, 11/0 Toho Seed Bead

R6 - 6mm Czech Crystal, Emerald

Step 1

Cut a 60-inch length of beading thread. String (4)S11 and go back through the first two S11.


Step 2

String (2)S11. Go down through the right side S11. Loop up through all left-side S11.

Step 3



String (2)S11. Go down through the right S11 below. Loop up through the adjacent S11.

Continue up through the first bead added. Repeat Step 3 for a total of 54 rows of S11.

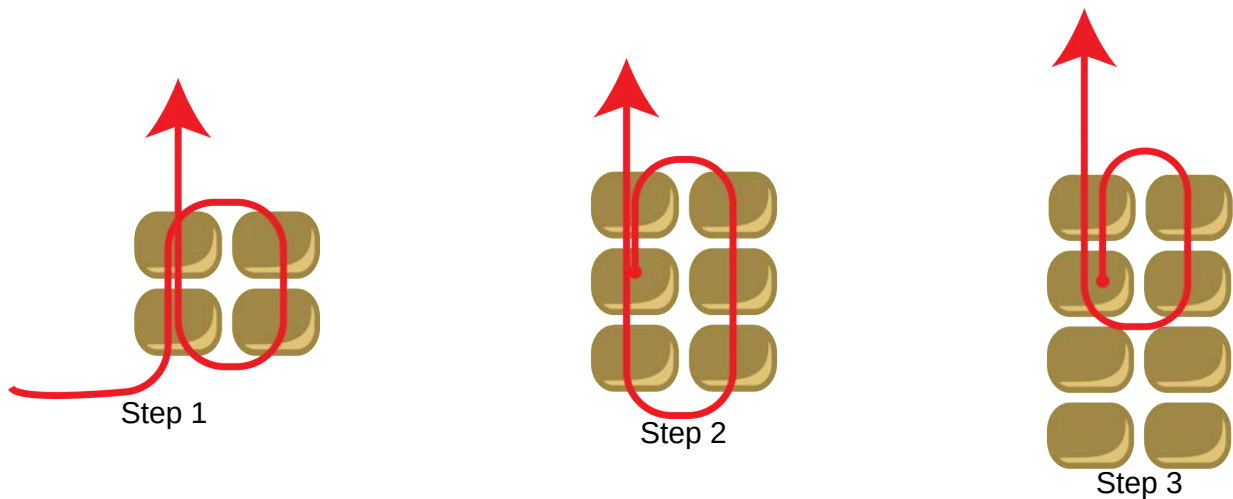


Step 4

In Step 3, we made a long strip of single-column herringbone. Weave this into a knotted position and join to the top.

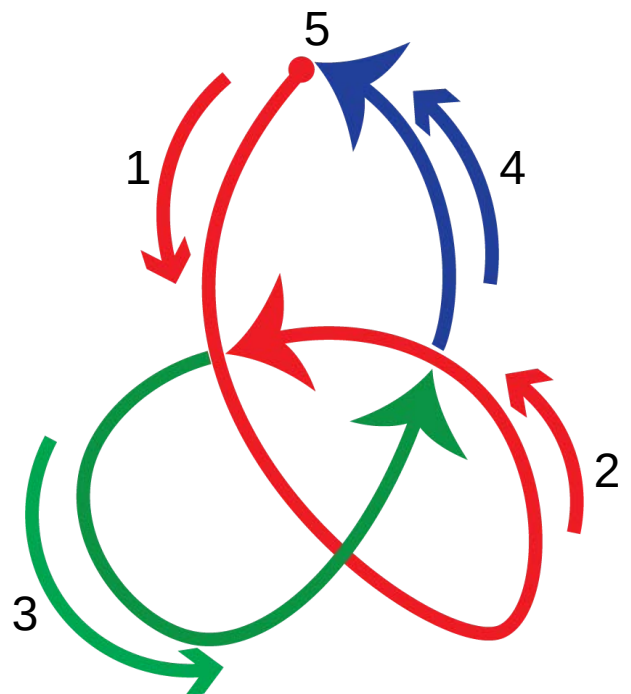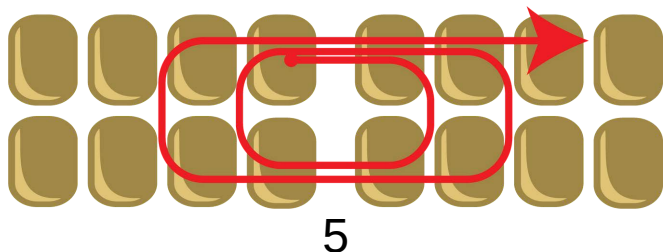

### Step 5

Adjust your trinity knot and position the R6 beads to settle in the loop of each round. Hold the bead in position where you'd like it. Exit from one S11, go through the R6, then go through an S11 on the opposite side of the bend. Make a turn and go through the adjacent S11 in the herringbone row. Go back through the R6. Go through the adjacent S11 in the same row as the one your thread exited at the beginning of this Step. Weave to repeat this step to add all three R6.

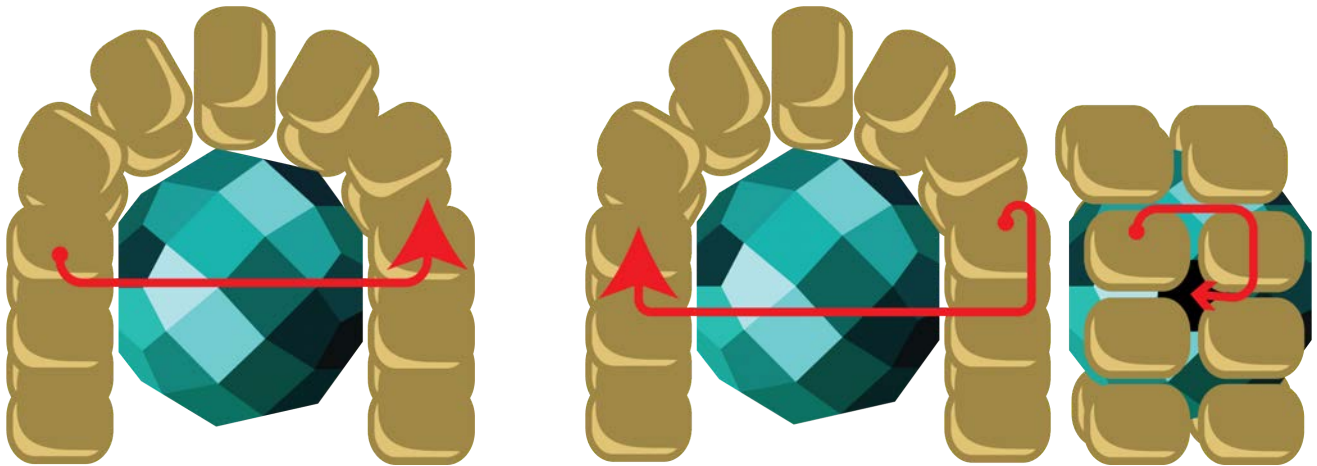

### Step 6

To add a connection to your bail, weave to exit from an S11 atop on of the R6. Identify the center, 3 beads. Exiting from one side, arch (4)S11 over the center (3)S11 and reinforce. Tip: You can string the bail over the S11 at this time. Reinforce, then weave in remaining threads and trim.

