SWAROVSKI

CREATE YOUR STYLE

DESIGN PROJECT
CHOKER "GREENWOOD"

Gluing

Wiring

Swarovski crystals

Article	Product Group	Article No.	Amount	Size	Color	Color Code
	Fancy Stones	4320	1 pc.	14x10 mm	Crystal Ivory Cream	001 L106S
	Fancy Stones	4320	1 pc.	14x10 mm	Crystal Royal Green	001 L109S
	Settings	4320/S 1PH2OH	2 pcs.	14x10 mm	Rhodium	
	Fancy Stones	4320	1 pc.	18x13 mm	Crystal Rainbow Dark F	001 RABDK
	Settings	4320/S 1PH2OH	1 pc.	18x13 mm	Rhodium	
	Fancy Stones	4327	1 pc.	30x20 mm	Crystal Rainbow Dark F	001 RABDK
	Fancy Stones	4327	1 pc.	30x20 mm	Crystal Royal Green	001 L109S
	Settings	4327/S 1PH2OH	2 pcs.	30x20 mm	Rhodium	
	Fancy Stones	4926	1 pc.	19x14 mm	Crystal AB Z F	001 AB
	Settings	4926/S 1PH2OZ	1 pc.	19x14 mm	Gold	
	Fancy Stones	4927	1 pc.	14x12 mm	Crystal AB Z F	001 AB
	Fancy Stones	4927	1 pc.	14x12 mm	Peridot Scarabaeus Green Z F	214 SCGR
	Settings	4927/S 1PH2OH	2 pcs.	14x12 mm	Rhodium	
	Fancy Stones	4927	1 pc.	19x17 mm	Crystal AB Z F	001 AB
	Settings	4927/S 1PH2OZ	1 pc.	19x17 mm	Gold	
	Ceralun	9020 CE Silver (A+B)		20 g	Silver	

Supplies & Tools

Supplies

1x Choker (flat), Ø13 cm, silver, 4.5 mm
3x Head pins, silver
1x Jump ring, silver, 3 mm
1x Jump ring, silver, 4 mm
3x Jump rings, silver, 5 mm

Tools

Flat nose pliers
Round nose pliers
Side cutter
Tweezers

Level of design: **INTERMEDIATE**

Have also a look at the **text instructions** at the last page!

STEP 1

Repeat x8

STEP 2

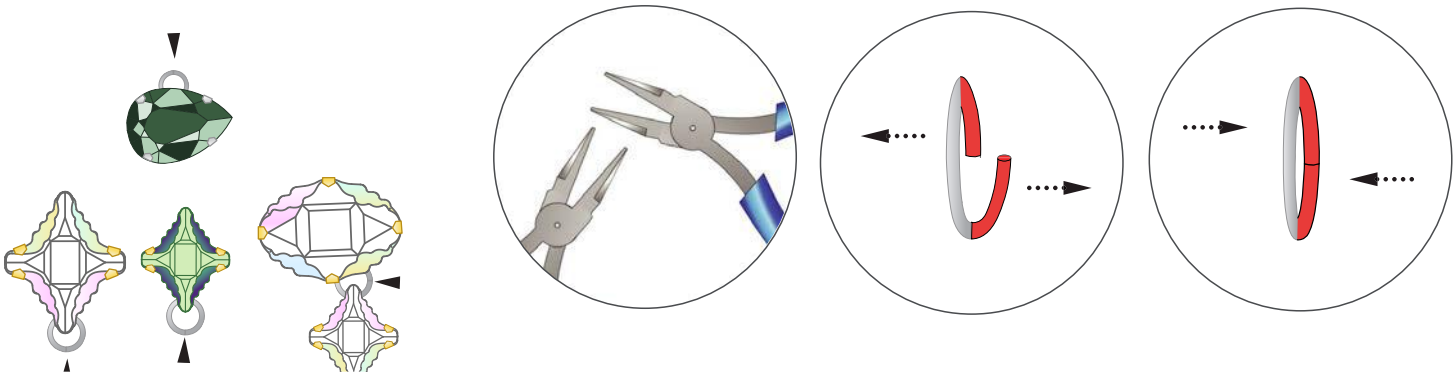

STEP 3

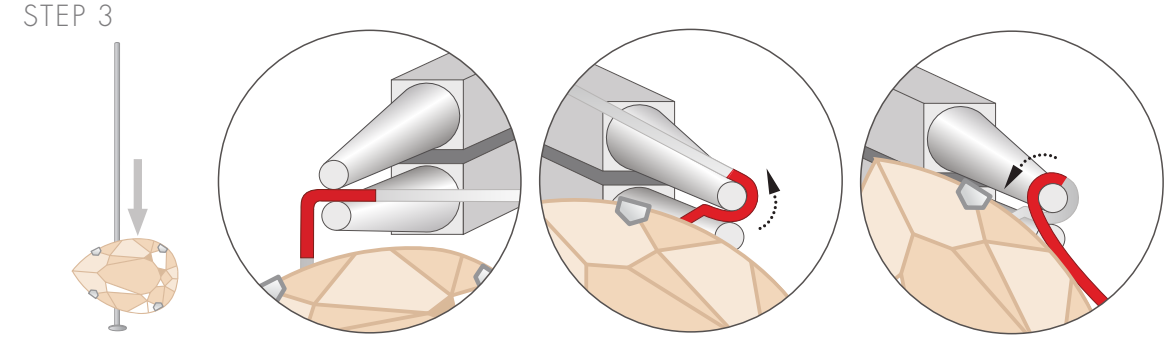

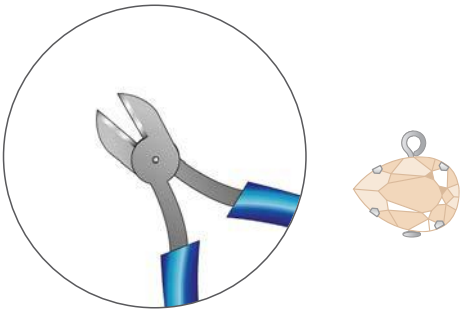

Repeat

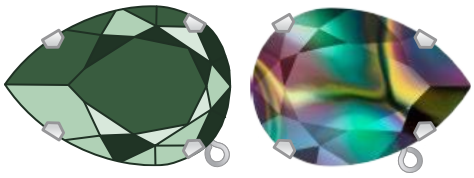

STEP 4

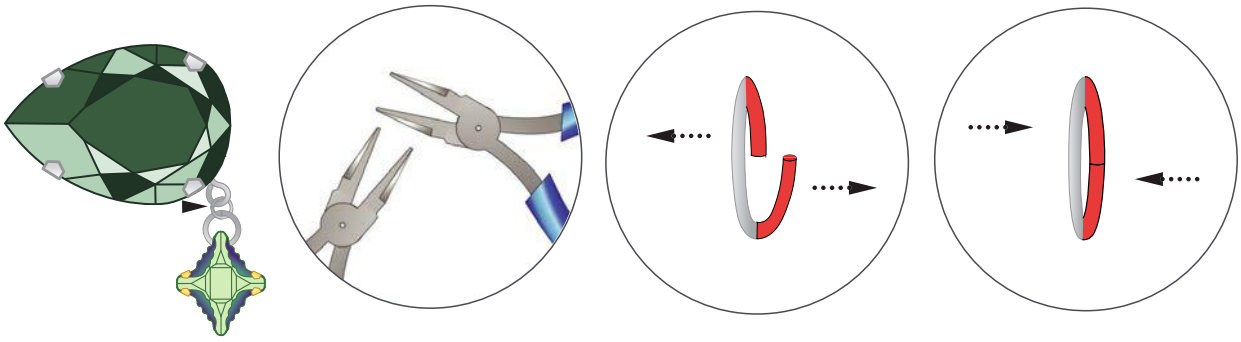

STEP 5

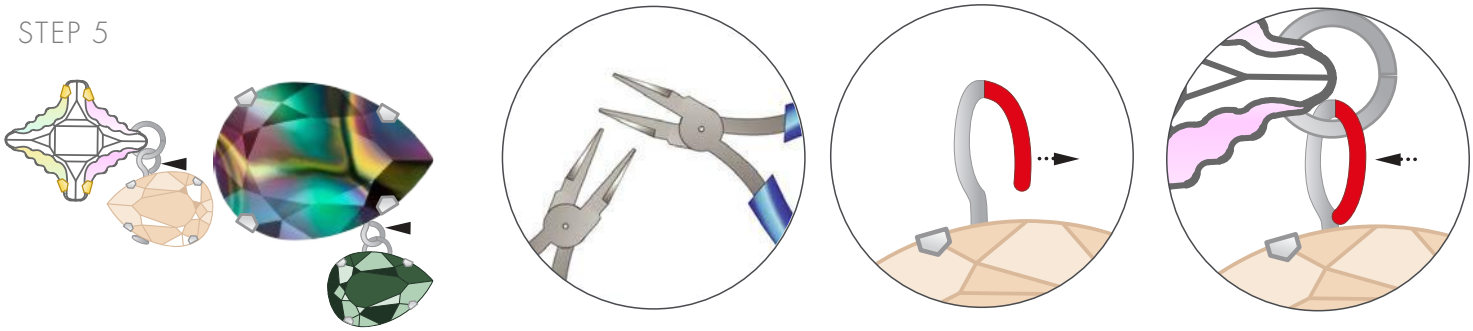

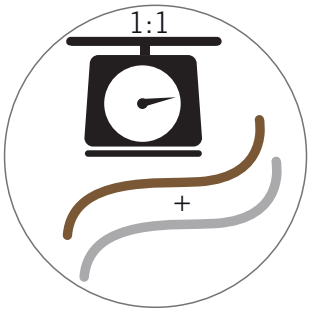
1:1
+

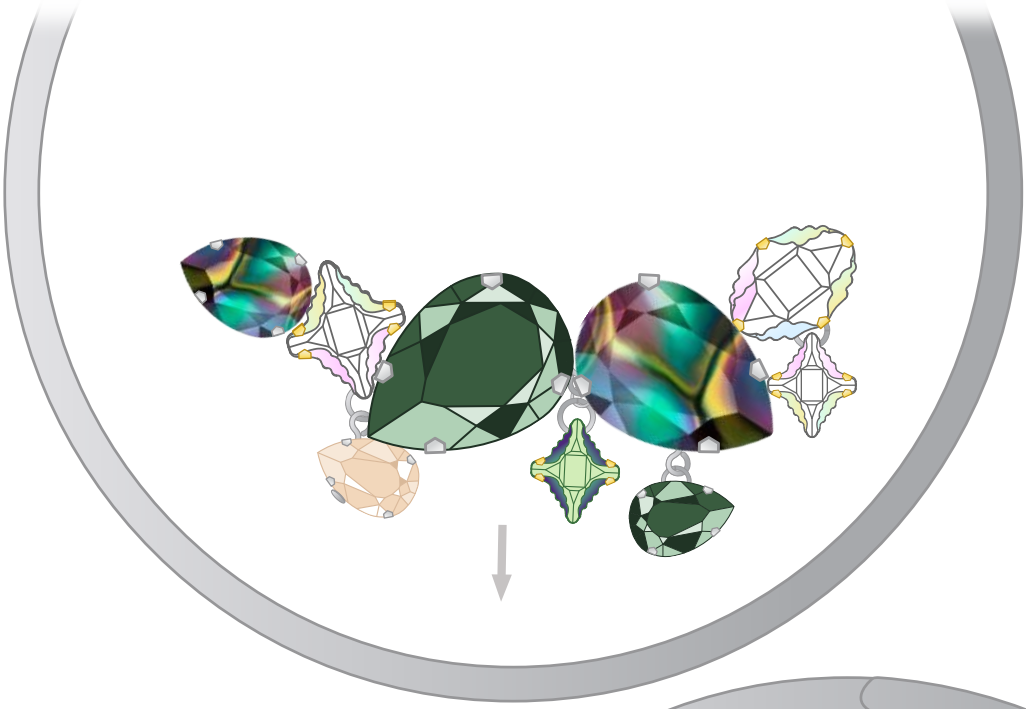

DESIGN PROJECT
CHOKER "GREENWOOD"

STEP 1: Insert all Swarovski Fancy Stones on the material list into their settings.

STEP 2: Attach 5mm jump rings to Fancy Stones as shown in the illustration with this step.

STEP 3: Insert Fancy Stones onto headpins as shown in the illustration.

STEP 4: Attach the Fancy Stones using 3mm jump rings as shown.

STEP 5: Attach the Fancy Stones in this step by opening the loops of head pins.

STEP 6: Follow the Swarovski Ceralun instruction in the illustration with this step to glue the Fancy Stones onto the choker.